
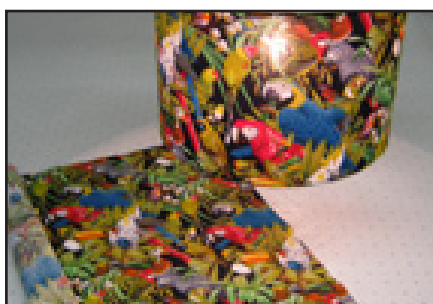


Design & Make Your Own Lampshade

Professional Range

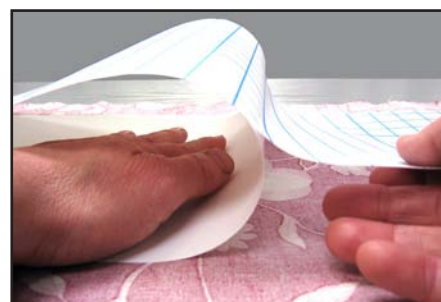

All you need to create a professional rolled edge lampshade.
Does not include covering fabric, Images are examples.

www.needcraft.co.uk


How to make your own professional rolled edge lampshade

www.needcraft.co.uk


Decorate a lampshade using your own choice of fabric by following the instructions below.




1. Place your covering over the self adhesive lampshade panel and cut down to a workable size, your covering needs to be bigger than the lampshade panel.

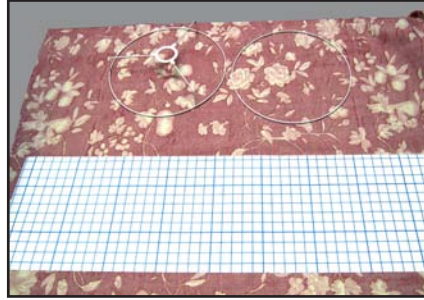

2. Remove creases and loose fibres from material, lay out COVERING FACE DOWN on work surface, place the self adhesive lampshade panel on top for position.

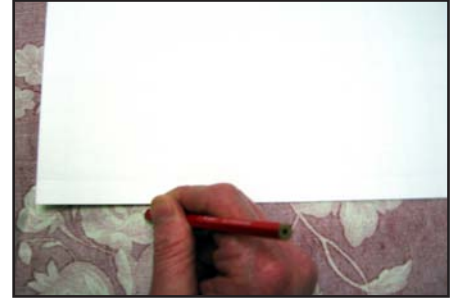


3. Once you are happy with the positioning mark the fabric.

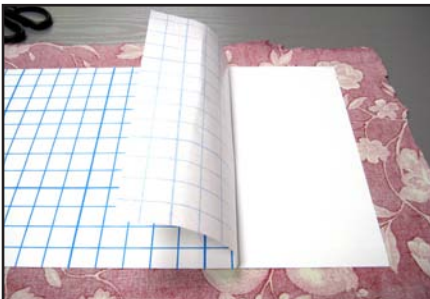


4. Peel back around 10cm of the release paper, and fold.



5. Place the lampshade panel over your covering ADHESIVE SIDE DOWN and align.

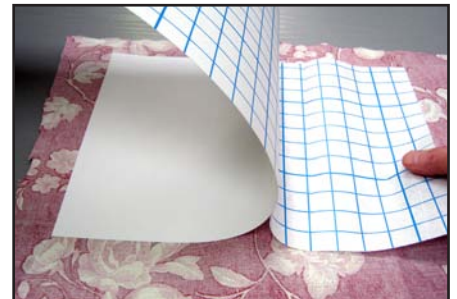


6. Once in position, stick the first 10cm down and smooth out.

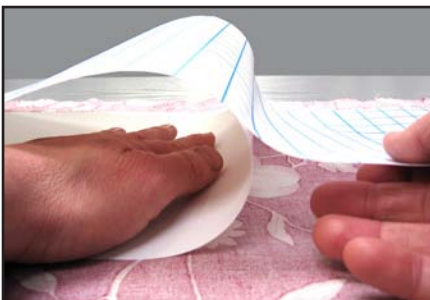

7. When happy with placement, remove rest of release paper, placing hand under panel.



7a. Pull exposed release paper, smoothing from the middle out.

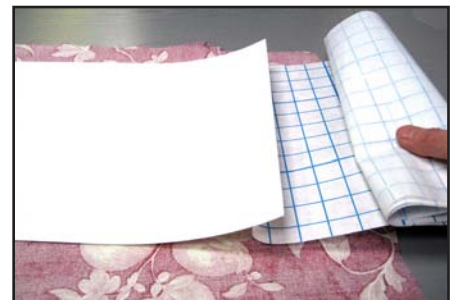


7b. Turn the panel over so the covering is now face up and press the fabric into adhesive and smooth.



8. Place the panel face down and cut off surplus material by running a sharp knife along the edges of the panel.



9. Snap back the edges around the panel until the PVC breaks.

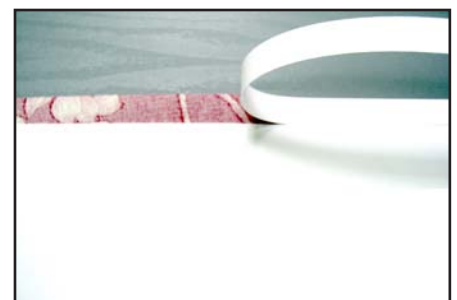

10. Remove the PVC to leave the covering.


If your covering is directional, you will need to think about which lampshade ring goes to the top or bottom, depending on the application Table lamp or Pendant shade. The lamp holder ring needs to be inserted to sit within the lampshade not extending out.




11. Your lampshade panel should now look like this, ready for lampshade assembly.



12. Put a strip of self adhesive tape on the right edge of the panel. This will be used for sticking the seam

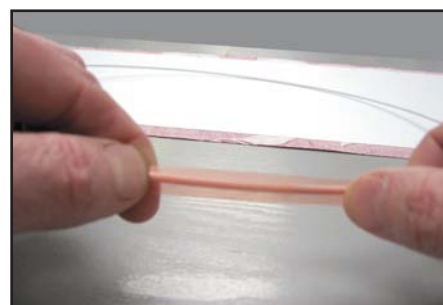

13. Stick self adhesive tape to outside of lampshade rings, cover edge the whole way round. Keep tape in centre applying evenly then press around the wire.

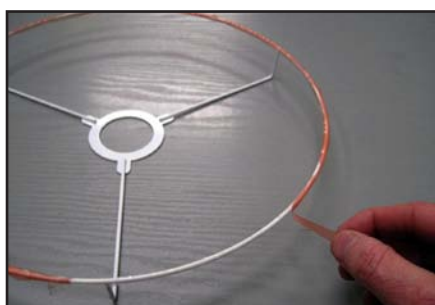

14. Remove release paper from tape. Once removed put ring down on work surface with the lamp holder down, otherwise the ring will stick to the table.



15. Remove the release paper from the second ring and place down on the edge of the panel.




16. Pick up the other ring, place on the opposite edge, and roll both rings around the panel keeping the wire in line to the PVC edge.



17. When you get to the overlap, remove the release paper from the seam and press both panels together.



18. Fold over the surplus covering all the way round so that it covers the inside of the lampshade ring.

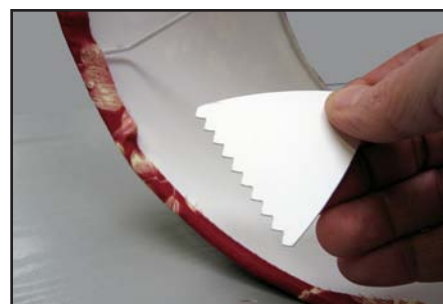

19. Using the serrated edge of the tool provided carefully push the surplus covering behind the ring. Continue around the lampshade, use tool points to tuck material behind the ring.



20. Use the smooth side of the tool to finish the tucking process, place the tool behind the ring and run it round the whole of the lampshade.



21. You will now have a professionally finished top quality lampshade



22. Sit back and enjoy your finished rolled edge lampshade.